

StudioWrapper[™] Professional Disc Wrapper

Getting Started Guide

Check Box & Unpack Wrapper

Before unpacking your StudioWrapper™ please check the shipping carton for damage. If you notice any damage please note the damage and if possible take a photo of the damage. This will be very helpful if a shipping damage claim is required due to poor handling by the carrier.

If the unit appears to be damaged call your reseller immediately to file a shipping damage claim.

If the unit appears to be in good condition then proceed to Chapter 1: Setup.

Chapter One: Setup


Select Suitable Workplace

For optimum performance and output you should setup your Wrapper in a comfortable working environment and select a stable and level work surface upon which to install your Wrapper.

Assembly


To make it feasible to ship the StudioWrapper™ at reasonable cost the Wrapper is shipped in two pieces. Please take a minute to verify the contents of your package:

- A. Vertical Wrapper Section
- B. Horizontal Wrapper Section
- C. Right Side Angle Bracket
- D. Left Side Angle Bracket
- E Six (6) 1/4" Hexagonal Bolts
- F One (1) Nut with Pressure Washer
- G. User Guide
- H. Package of Poly-Film for Wrapping amaray Style DVD Case or Standard CD Jewel Case. (not pictured)

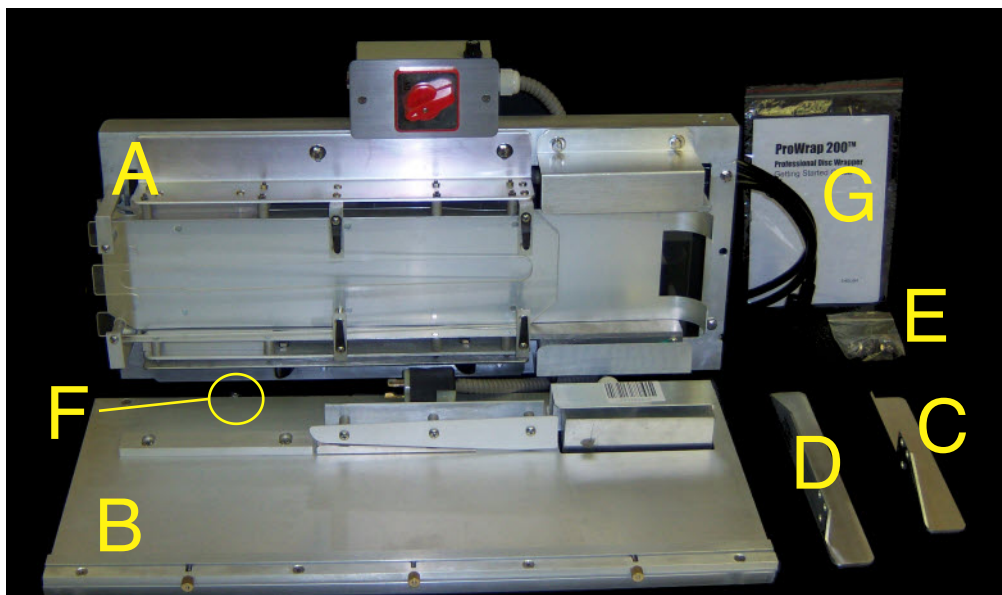


Please follow these simple steps to complete the assembly of your Wrapper:

STEP 1: Install the two angled support brackets to the bottom of the vertical section of the wrapper using the six (6) 1/4" hexagonal bolts. Then fasten the vertical section to the horizontal section.

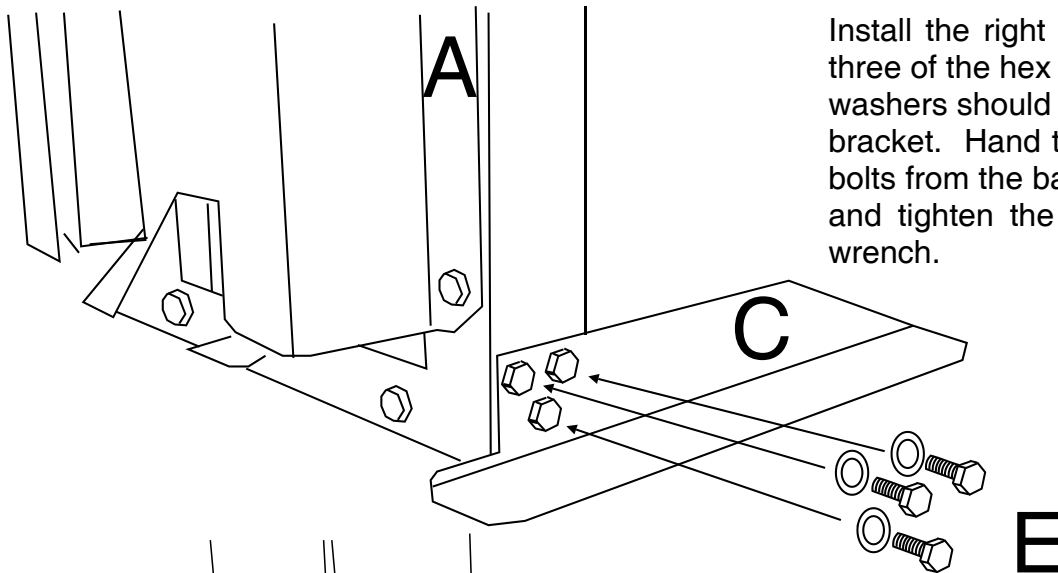


Install the right side bracket C using three of the hex bolts (E) and nuts. The washers should be on the outside of the bracket. Hand thread the nuts to the bolts from the backside of the bracket and tighten the bolt securely with a wrench.

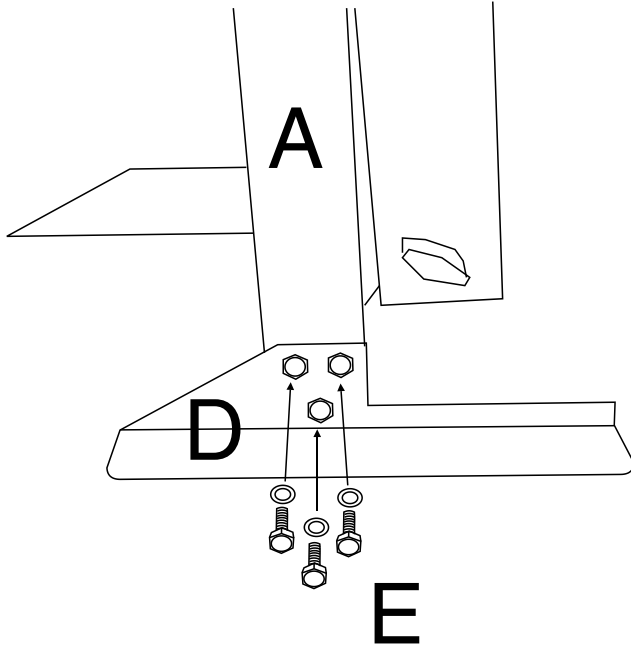


Install the left side bracket D using three of the hex bolts (E) and nuts. The washers should be on the outside of the bracket. Hand thread the nuts to the bolts from the backside of the bracket and tighten the bolt securely with a wrench.

Next with the vertical section (A) standing upright remove the nut and lock washer (F) from the horizontal section (B). Align the vertical and horizontal sections and then replace the lock washer and nut and tighten with a wrench.

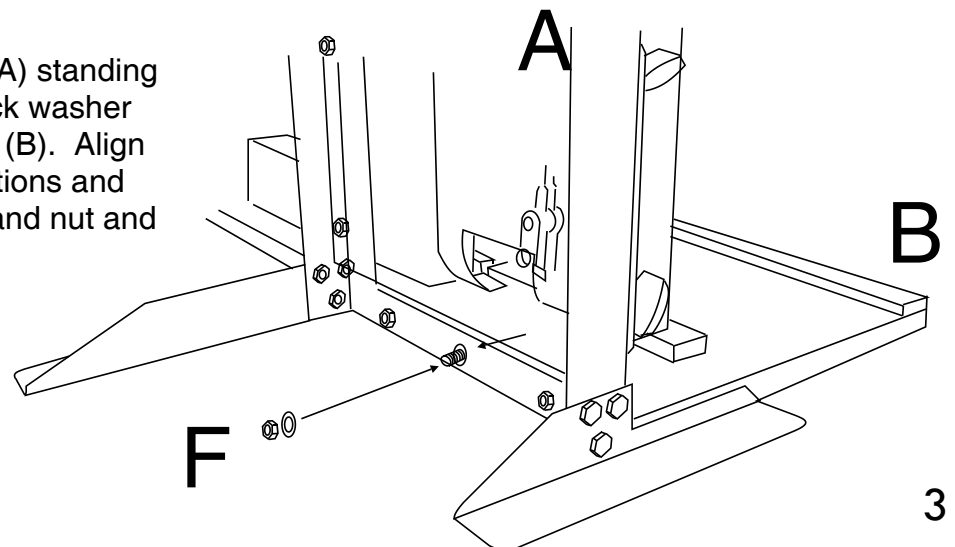


STEP 2: Connect power between the vertical and horizontal sections by connecting the power connection.

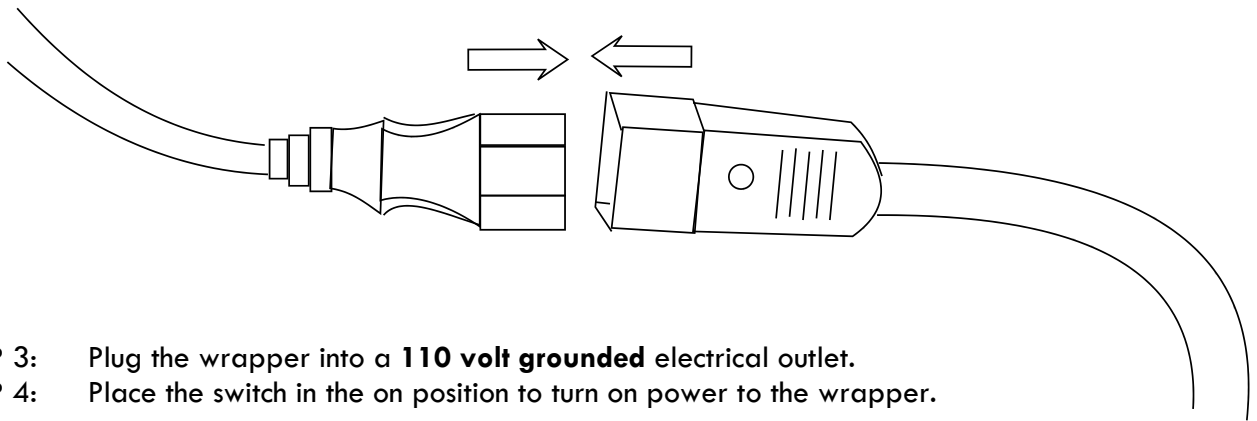

STEP 3: Plug the wrapper into a **110 volt grounded** electrical outlet.

STEP 4: Place the switch in the on position to turn on power to the wrapper.

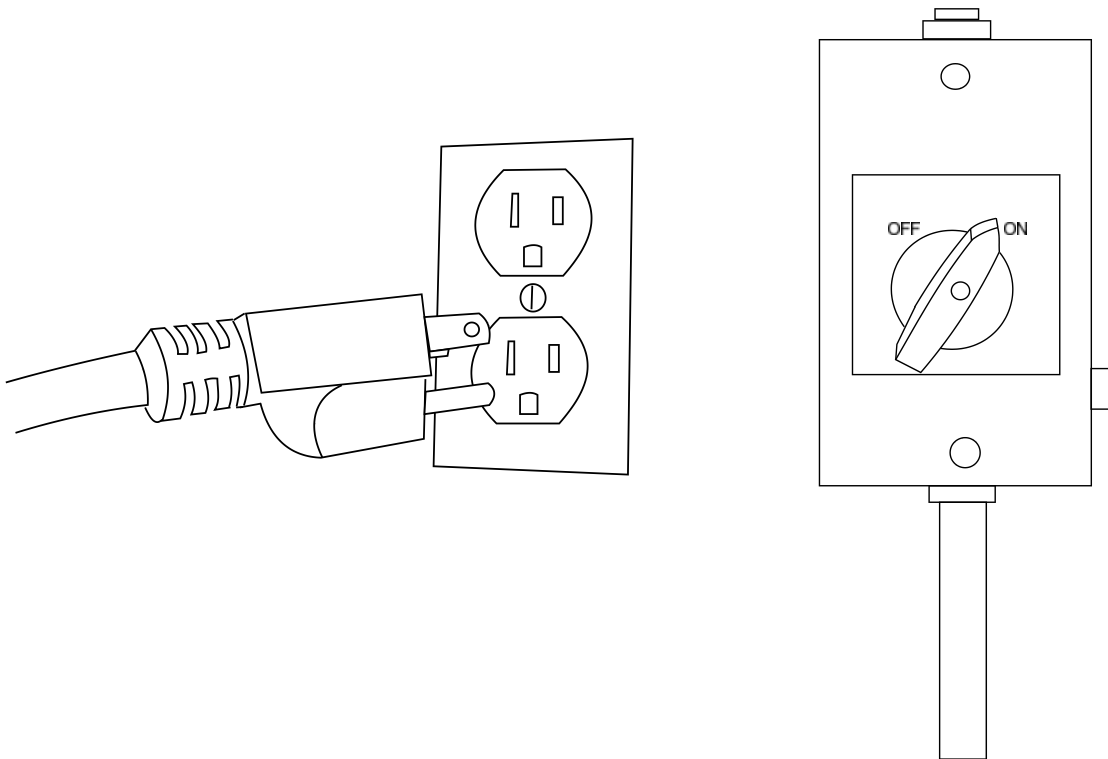

NOTE: The wrapper must warm up for approximately 10 minutes to allow the heating elements to reach the appropriate temperature before they will properly seal the wrapping film.

Chapter Two: Wrapping a Case

TIP: View a demonstration video on our web site to quickly familiarize yourself with the StudioWrapper. The video is an easy way to understand the basics of wrapping a disc. http://www.recordexusa.com/StudioWrapper_ep.swf


Your First Case

It will take longer to wrap the first few cases, but after a little practice you should be able to wrap 200 cases per hour without much difficulty. You will be amazed at how professional your discs look when poly-wrapped in an amaray style DVD case or CD jewel case. Your customers will instantly notice the difference between shrink wrapping and poly-wrapping.

To wrap your first few case follow these steps:


- STEP 1: Open the package of poly-film wrappers.
- STEP 2: Place the case into the poly-film wrapper as shown in the diagram on the right. Be sure to leave an even margin around the case.
- STEP 3: Insert the case and film the into the top of the vertical section of the wrapper with the open sides of the film to the left, and right, and top. (as depicted to the right)
- STEP 4: Slide the case and film down the vertical section until it comes into contact with heating elements. Heating times may vary by film. Keep the case in contact with the heating elements for 3 to 5 seconds until the film has been sealed. With practice you will get a feel for how long the case need to be by the heating elements.
- STEP 5: For maximum efficiency you will want to prepare the next case while the first case is waiting at the heating element. To do this simply follow steps 1-4 again and this time while you slide the case down remove the case that is already at the heating elements.

NOTE: At this point you should have one case that is sealed on three sides and one that is at the heating elements being sealed.

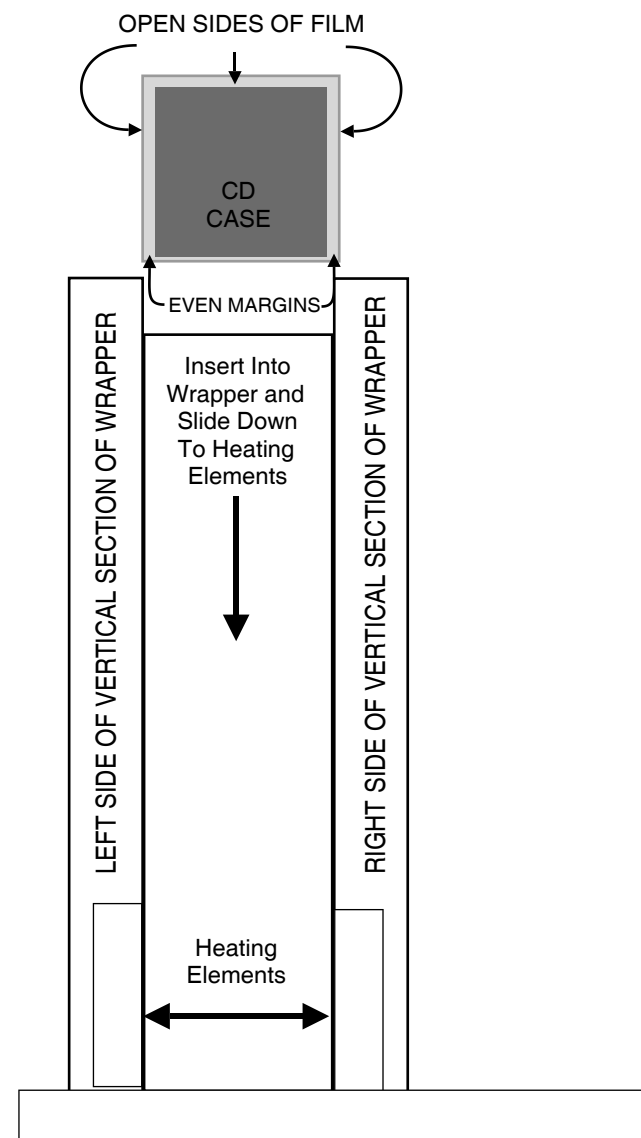


STEP 6 - 8CONTINUE TO THE NEXT PAGE.

STEP 6: To seal the top of the case you will need to slide the case along the horizontal (flat) section. First, you need to prepare the film for sealing. To do this you must fold over the excess wrapping film using your fingers (this is much like wrapping a gift). (See Right)

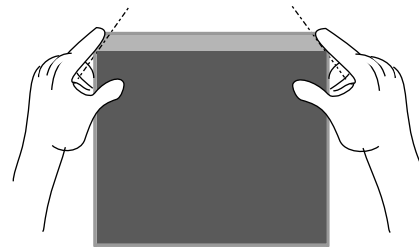


STEP 7: With your fingers holding down the excess film place the case into the horizontal section and slide it to the right and leave the case at the heating element for 3 to 5 seconds to seal the top of the case. (See Below)

STEP 8: While the case is resting at the second heating element you can start another case. By starting a new case each time you are waiting for the film to be sealed you can get into a quick rhythm. With some practice you should be able to wrap 200 cases per hour.

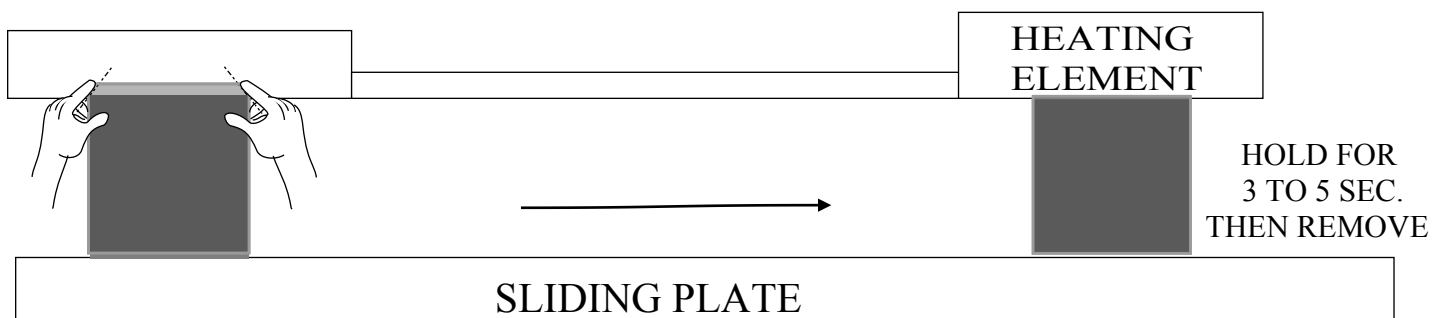

* NOTE: Illustration is for CD case but the process is the same for DVD models.

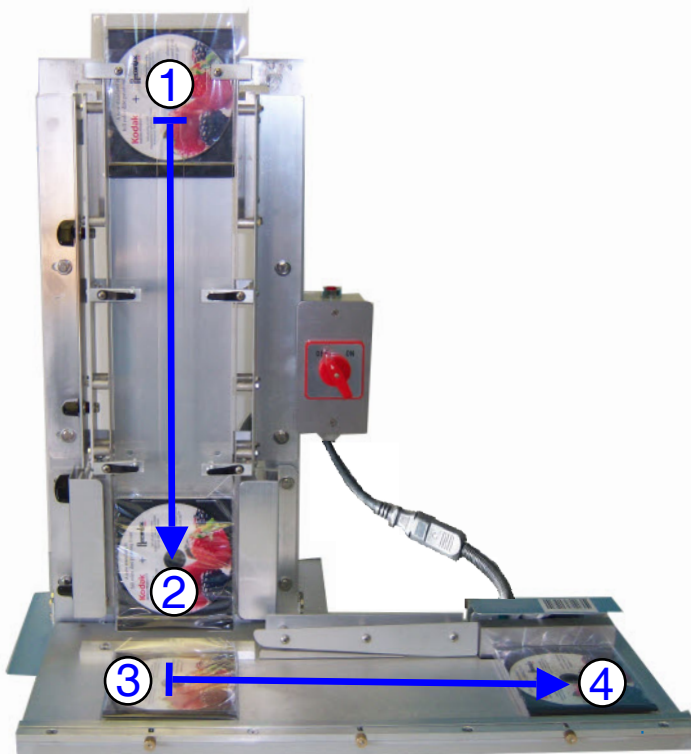


Chapter Three: Adjustments

It may be necessary at times to make minor adjustments to the wrapper such as when you are using a different case or film that is a little bit thicker or thinner.

Adjusting the width of the vertical sliding chamber.

- 1) Loosen bolts and make adjustment from the top to the bottom on the left side of the vertical section.
- 2) Keep in mind that if the sliding chamber is too tight then the case and film will not slide properly. If the case does not slide smoothly you may need to make the sliding chamber a little wider.
- 3) Be careful not to over-tighten the bolts.

*NOTE: See Illustration Below for Position of Adjustment Knobs.

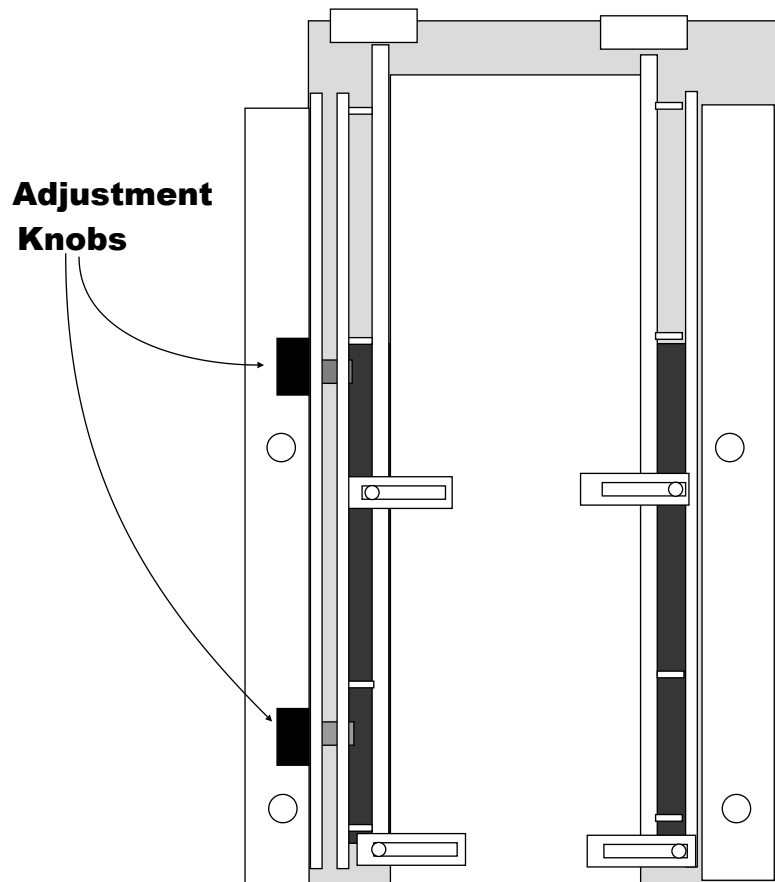

!!! CAUTION !!!

It is not recommended that you attempt to service the wrapper. If you encounter problems contact your reseller and they will assist you with getting service.

NEVER attempt to service the heating plates.

ALWAYS use caution when operating the wrapper as the heating blocks can be very hot.

NEVER leave the wrapper on when not in use.

NEVER store items on top of or next to the heating blocks.

ALWAYS use a grounded electrical outlet.

NEVER attempt to alter the wrapper or utilize for any purpose other than wrapping disc cases.

Warranty

Limited 6-Month Warranty on StudioWrapper™ Commercial Disc OverWrapper

What is my warranty? Recordex warrants to the original purchaser only that the disc overwrapper will be free from defects in material and workmanship under normal use for a period of six (6) months from the date of original purchase. However, Recordex does not warrant against failures related to poor quality consumables. Recordex's warranty shall not apply: (i) to any overwrapper subjected to accident, misuse, neglect, alteration, acts of God, improper handling, improper transport, improper storage, improper use or application, improper installation, improper testing or unauthorized repair; or (ii) to cosmetic problems or defects that result from normal wear and tear under ordinary use, and do not affect the performance or use of the product. If the overwrapper develops a covered defect within the first six months, Recordex will, at its option, either repair or replace the overwrapper at no charge, provided that the overwrapper is returned during the warranty period.

How long does this warranty last? Six (6) months from the date of the original purchase.

What must I do to obtain warranty service? To obtain warranty service please contact Recordex's Customer Service Center at 1-478-237-5501 or contact your authorized Recordex Dealer for assistance in filing a warranty claim. You will receive instructions on how to properly return your product for authorized warranty repair. In order to receive warranty service you must be able to provide an original receipt for the purchase of your overwrapper.

THE ABOVE STATED WARRANTY IS EXCLUSIVE AND REPLACES ALL OTHER WARRANTIES EXPRESSED OR IMPLIED INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. RECORDEX WILL NOT BE HELD LIABLE FOR ANY OTHER DAMAGES OR LOSS INCLUDING INCIDENTAL OR CONSEQUENTIAL DAMAGES AND LOSS OF PROFITS OR REVENUES FROM WHATEVER CAUSE, INCLUDING BREACH OF WARRANTY OR NEGLIGENCE.

