

Setup Instructions for SimplicityTouch IFP

Topics Covered:

- 1) Fix issues related to touch inside of Chrome browser

Model Numbers Covered: All SimplicityTouch Models

Last Update: 01-29-16

e: support@recordexusa.com

TOOLS REQUIRED:

None.

ESTIMATED TIME REQUIRED:

Update settings: 5 min


Setup Instructions for SimplicityTouch IFP

For Model Number: 70" ST-700, Generation 1 -

Fix Chrome Touch Events

1. Open the Chrome browser on your PC. Then follow instructions below.

type `chrome://flags` into omnibox

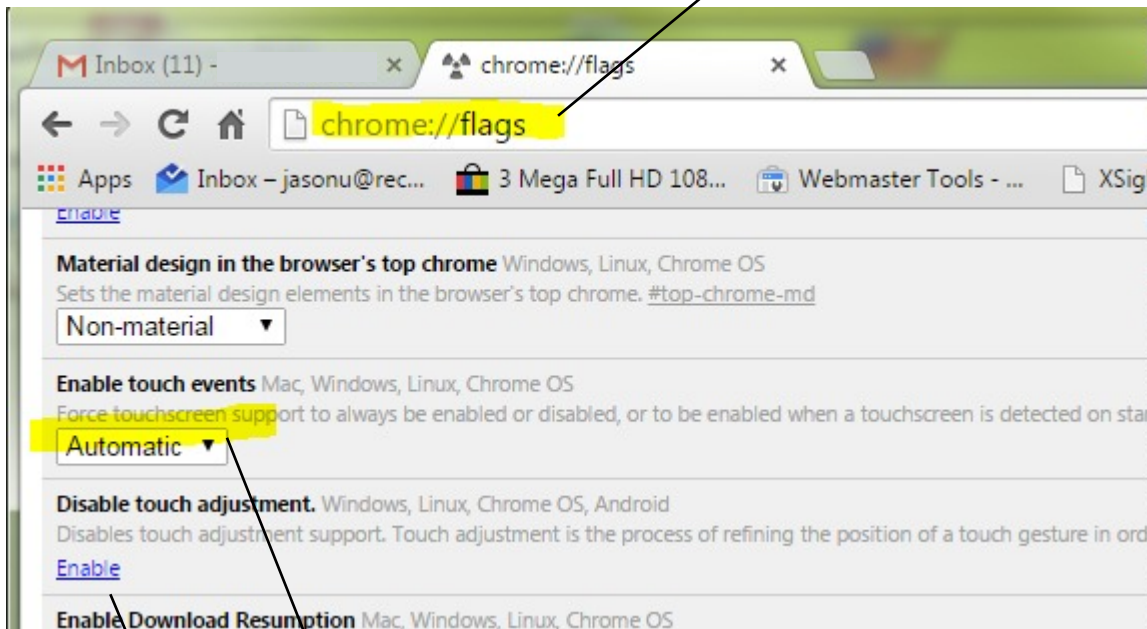

Scroll down until you see Enable touch events.

- 1) If currently set to Automatic then change to Enabled.
- 2) If currently set to Disabled then change to Automatic, then restart Chrome and test to see if touch works. If it does not then change from Automatic to Enabled and restart Chrome and retest. Touch should now work fine.

NOTE: If problems continue then click/tap on enable under "Disable touch adjustment."